



Repairing LG VX5200 Camera

Tools used in this guide

- [Fingers](#)
- [Phillips #00 Screwdriver](#)
- [Plastic Opening Tools](#)
- [Thumb Tack](#)



Step 1 - Battery

- Turn the phone on its back.



Step 2

- Orient the phone as shown.
- Remove the battery cover by pushing upward with your thumb.






Step 3



- Place your fingernail at the top of the battery and pry the battery out towards you.



Step 4 - Face Plate


- Flip the phone open.
- Remove the four rubber plugs, located at the corners of the LCD screen, with a push-pin.
- Use a Phillips #00 screwdriver to remove the four screws located underneath the rubber plugs.

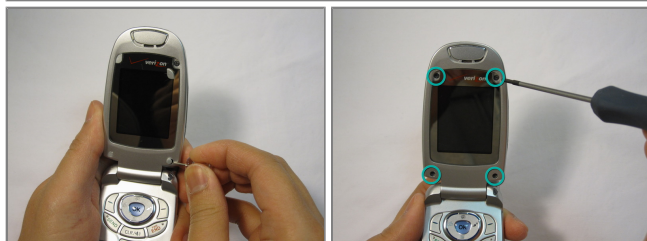

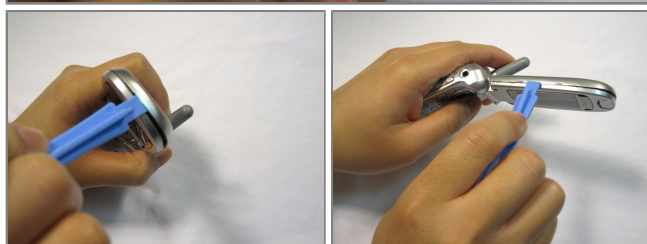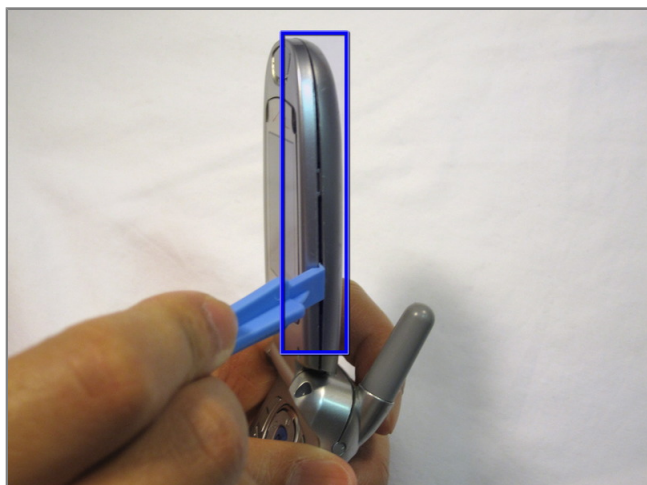


Step 5

- Insert the iPod opening tool in the seam of the top portion of the flip phone.
- Gently pry the seam open.
- Move the opening tool around the perimeter of the seam and gently take the front LCD face plate out.

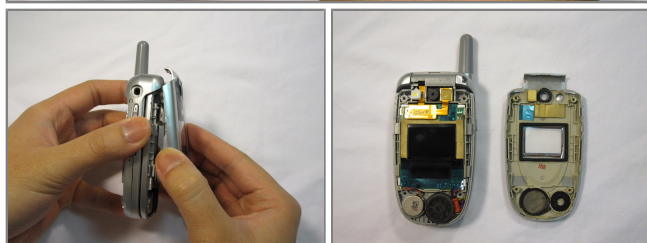



Step 6

- Close the flip phone.
- Hold the base of the phone and gently remove the faceplate.
- Place the phone and the faceplate on a clean, flat surface.

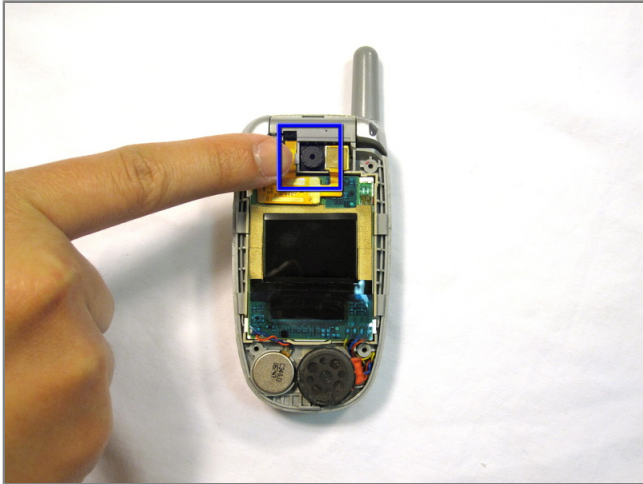


Step 7 - Camera


- Locate the phone camera.
- Locate the white rubber stopper to left of the camera.
- Remove white rubber stopper by grabbing an edge with your fingers and gently pulling it off.

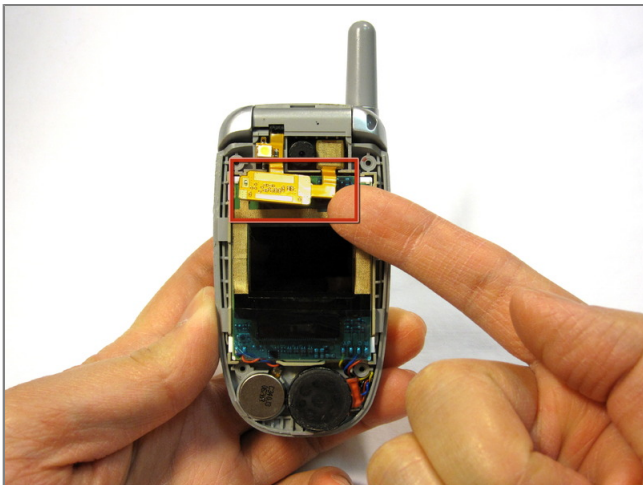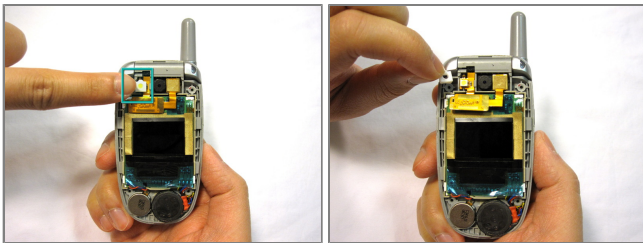

Step 8

- Lift the copper ribbon cable up from the bottom right hand corner.

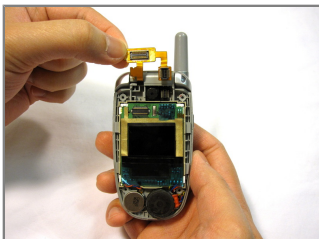

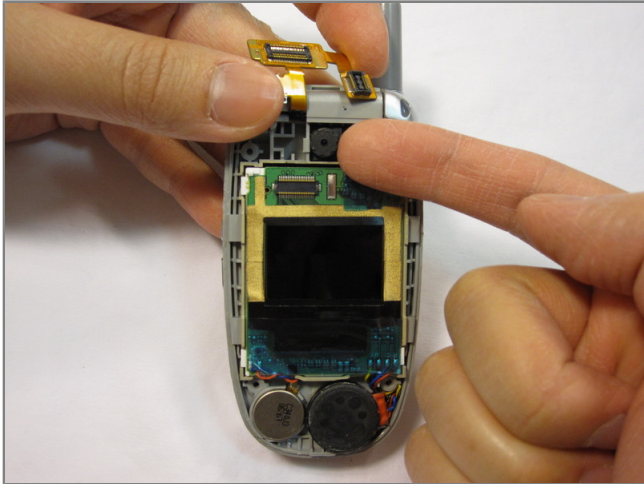

Step 9

- While holding the copper connection out of the way, use your fingernail to pry the camera out of its socket.

